



FIRMWARE RELEASE NOTES

Version 3.10.40 (BrightSign HD110, HD210, HD210w, HD410, HD810, HD1010 and HD1010w)

Updating your BrightSign Software

1. Download the Brightsign Software update.zip file.
2. Unzip it and copy update.bsfw to the root of your SD card using your PC and a card reader.
3. Power off the BrightSign player.
4. Place your card into the SD slot of the BrightSign player.
5. Power on the BrightSign player. The player software will update and restart automatically.

Changes Since 3.10.22

Note

Unless marked by a ✓ symbol, new features listed in these release notes are not available in the current beta or release version of BrightAuthor and can only be utilized with custom scripts. A feature may become available through BrightAuthor at a later date. Please refer to the BrightAuthor release notes for all new features and functionality made available in BrightAuthor.

Bug Fixes

- Animated ticker zones that have a single line of text are now left aligned instead of centered.
- Large disk drives are now given a longer period of time to carry out fsck on boot up: This prevents fsck timeout errors that stop the autorun.
- Several multi-touch screen issues relating to Acer monitors have been fixed.

Improvements

- New ParseJSON global function has been added to BrightScript 3.0.

Note: Please see the [BrightScript 3.0 Reference Guide](#) for more details about this function.