

BrightSign®

FIRMWARE RELEASE NOTES

Version 3.10.57 (BrightSign HD110, HD210, HD210w, HD410, HD810, HD1010 and HD1010w)

Updating your BrightSign Software

1. Click the **Download Now** button below the model number that corresponds to your BrightSign player.
2. Unzip the downloaded file and copy the *.bsfw* file to the root directory of your SD card.
3. Insert the SD card into your BrightSign player.
4. Power on the BrightSign player.
5. Ensure that the yellow update LED is blinking during the update process. Once the player has finished updating, it will automatically delete the *.bsfw* file from the SD card and reboot.

Changes Since 3.10.52

Note

Unless marked by a ✓ symbol, new **features** listed in these release notes are not available in the current beta or release version of BrightAuthor and can only be utilized with custom scripts. A feature may become available through BrightAuthor at a later date. Please refer to the BrightAuthor release notes for all new features and functionality made available in BrightAuthor.

Bug Fixes

- Player setup files now correctly overwrite previous invalid WiFi passphrases in the registry.

Improvements

- Network diagnostics no longer indicate a failed HTTP connection if the player has been configured to use a proxy server.