

BrightSign®

FIRMWARE RELEASE NOTES

Version 3.10.22 (BrightSign HD110, HD210, HD210w, HD410, HD810, HD1010 and HD1010w)

Updating your BrightSign Software

1. Download the Brightsign Software update.zip file.
2. Unzip it and copy update.bsfw to the root of your SD card using your PC and a card reader.
3. Power off the BrightSign player.
4. Place your card into the SD slot of the BrightSign player.
5. Power on the BrightSign player. The player software will update and restart automatically.

Changes Since 3.10.18

Improvements

- This version of firmware is compatible with the new BrighAuthor release: 3.5.0.22
- The maximum number of subroutines and functions in a single script has been increased from 512 to 1024.
- `Show()` and `Hide()` functions have been added to `rolmageWidget`.

Bug Fixes

- The player no longer crashes if the BrightScript debugger invokes a function or subroutine with an index of 256 or greater.