

**BrightSign®**

# FIRMWARE RELEASE NOTES

Version 3.11.11 (BrightSign HD110, HD210, HD210w, HD410, HD810, HD1010 and HD1010w)

## Updating your BrightSign Software

1. Click the **Download Now** button below the model number that corresponds to your BrightSign player.
2. Unzip the downloaded file and copy the `.bsfw` file to the root directory of your SD card.
3. Insert the SD card into your BrightSign player.
4. Power on the BrightSign player.
5. Ensure that the yellow update LED is blinking during the update process. Once the player has finished updating, it will automatically delete the `.bsfw` file from the SD card and reboot.

## Changes Since 3.11.7

### Bug Fixes

- Players that are networked with SSL now correctly upload logs to the BrightSign Network. Note that this issue does not affect players that use plaintext HTTP connections.

### Improvements

- The `roTimer` object now has a `SetElapsed()` method that allows you to construct timed events that are independent from the system clock (and are thus immune to unexpected system time changes).