

BrightSign®

FIRMWARE RELEASE NOTES

Version 4.4.82 (BrightSign HD120, HD220, HD1020)

Updating your BrightSign Software

1. Download the Brightsign Software update.zip file.
2. Unzip it and copy update.bsfw to the root of your SD card using your PC and a card reader.
3. Power off the BrightSign player.
4. Place your card into the SD slot of the BrightSign player.
5. Power on the BrightSign player. The player software will update and restart automatically.

Changes Since 4.4.75

Note

Unless marked by a ✓ symbol, new features listed in these release notes are not available in the current beta or release version of BrightAuthor and can only be utilized with custom scripts. A feature may become available through BrightAuthor at a later date. Please refer to the BrightAuthor release notes for all new features and functionality made available in BrightAuthor.

Bug Fixes

- Multiple zones with Live Text no longer encounter intermittent flickering issues.
- Players no longer attempt to retrieve an AutoIP address when the Ethernet interface is disconnected.

Improvements

- Players are now compatible with the Logitech N305/K350 wireless numeric keypads, as well as other devices that use Logitech's Unifying receiver technology.